

## PROGRAMING THE ICOM V-8000

To enter a frequency, on the microphone push the VFO/LOCK key followed by the C/ENT key. Key in the 6 digit frequency.

To select the offset, press the 7(-DUP) key for minus, the 8(+DUP) for plus or 9(SIMP) for simplex.

To enable the PL tone, push the FUNC key and then the 7(TONE) key until the musical note ♪ appears in the display.

To select and enter the tone frequency, push the B/SET key to enter the SET mode. Continue to press the B/SET key until r t appears in the lower right of the display. Use the ▲ and ▼ buttons until the desired tone frequency is displayed. Push the A/CLR key to exit

To put the information in a memory channel, Push the FUNC key the the A/CLR key. Select the memory channel number where you want the information stored by using the ▲ and ▼ keys. When you have selected the channel, push the FUNC key and then push and HOL the A/CLR key for 1 second. You will hear 3 beeps when the information is stored.

To scan memory channels, you must be in memory mode. Push the MR/CALL button to get into the memory mode. Once in memory mode, just push and hold either the ▲ or ▼ button to initiate scanning. To stop scanning push the PTT Button.

To skip a channel while scanning, push the MR/CALL button. Push the ▲ or ▼ button to select the channel to be skipped. Push the B/SET button to enter the SET mode. Push the B/SET button several times until CHS appears. Push the ▲ or ▼ button to set or cancel the skip function. Push the A/CLR key to exit.