

FT 60 PROGRAMING

Press V/M key to get in VFO mode.

Press BAND key until desired band appears

Enter a frequency by rotating the main dial or key it in directly from the keypad.

To set a subaudible (PL) tone, push the F/W key then the 1 key. Rotate the dial until TONE appears. Press the PTT button to save

To set the tone frequency, press the F/W key then the 2 key. Rotate the main dial until the desired frequency is displayed. Press the F/W key to save the tone and return to normal operation.

To store the information in a memory channel, PUSH and HOLD the F/W key for 1 second. Rotate the dial to select a channel. Press the F/W key to store the information.

To Return to memory mode, push the F/W key